

Ademco Vista 12 / First Alert 145 C

Zones - 6 Hardwired, up to 22 Wireless

Batteries - 12 volt rechargeable inside main panel, AC Transformer is 16 volts

Door/Windows	3-volt Lithium(Panasonic CR123A)
Motion Sensor	2 3-volt Lithium(Panasonic CR123A)
Smoke Detector	2 9-volt Alkaline
Remote Keypads	9 Volt Alkaline
Keyfobs	3-volt Lithium(CR2430 Hearing Aid type)
Remote Panics	3-volt Lithium(Panasonic CR123A)

Downloadable - Yes

Panic Buttons - Police Panic - * and #

Fire Panic - 1 and *

Medical Panic - 3 and #

Status - Press * if keypad shows NOT READY to view open zones

Arm AWAY - 4-digit code + 2 (AWAY)

Arm Stay - 4-digit code + 3 (STAY)

Disarm - 4 digit code + 1 (OFF)

Quick-Arm Press # + 2 for AWAY, # + 3 for STAY

Instant Arm - 4 digit code + 7 (INSTANT)

Max Arming - 4-digit code + 4 (MAX) to arm everything Instant

Silence Alarm - 4-digit code + 1 (OFF) twice to turn off siren and reset display

(If code is entered wrong, wait 2 or 3 seconds then try again)

Door Chimes - 4-digit code + 9 (CHIME)

Bypass - 4-digit code + 6 (BYPASS) + zone (01, 02 03 etc)

Alarm Memory - There is no alarm memory

Reset Smoke - 4-digit code + 1 (OFF) twice to turn off siren and reset smoke

(If this does NOT reset smoke detector set for service, smoke is bad)

Reset Strobe - 4-digit code + 1 (OFF) twice

Test Sensors - 4-Digit Code + 5 (TEST)

Keypad will beep every 3 minutes

Open sensors and keypad will sound

End test with 4-digit Code + 1 (OFF) key

(Wireless motions require no movement for 4 minutes

prior to testing)

Pager Signals - Only available on Vista-10SE (not older Vista-10

Alarms -Account + 1911 + 3 digit Zone #

Openings -Account + 1001 + 3 digit User #

Closings - Account + 1002 + 3 digit User #

Trouble - Account + 1811 + 3 digit Zone #