

## Bosch 2212

### Radionics 2212 Basic Commands

Zones/Points - 8 Hardwired, up to 24 total with Hardwired expanders and RF Receiver

Battery - 12 volt rechargeable Gel-Cell inside main panel  
AC Transformer = 16.5 volts, screwed into outlet somewhere in house

Wireless - Yes but rare

Downloadable - Yes

Panic Panic - Police (A key), Fire (B key) and Medical (C key)

Arm Away - Press 9 Key ALL & ON & Zone Lights turn ON (Arms all Zones)

Arm Stay - Press 0 Key PART & ON Lights turn ON (Arms all but Motions)

Instant Arm - Press 9 (ALL) or 0 (PART) key twice (No Delay Light turns ON)

Disarm - Enter User Code, If wrong code is entered press CLEAR and start again

Flashing OK - Alarm Memory, Arm then Disarm or press 3 + User Code to reset and clear

Alarm Memory - Press 4 then hold 6 key, last alarm should show, press CLEAR to exit

Reset Alarm - 3 + User Code

Reset Smoke - 3 + User Code (If this does not work power down system and set for service)

Silence Trouble - Press CLEAR Key once

Bypass - 1. Arm system 9 (ALL) or 0 (PART), ON light and all Zone Lights will turn on

2. Press Zone to bypass (1 to 8), bypassed zone turns off and finish arming

Enable Chime 1. Press 7 (WATCH TONE) (Keypad gives 1 beep)  
2. Enter Owners Passcode (Keypad gives 1 beep)  
3. Press 1 to 4 for Chime Option (see below) (Selected option 1 to 4 turns ON)

1 = Zone lights but no sound (Chime Disabled)

2 = Zone lights, keypad sounds short beep (This one works best)

3 = Zone lights, keypad sounds until CLEAR pressed (don't do this one)

4 = Zone lights, keypad sounds until Zone closed or CLEAR pressed

4. Press CLEAR to exit

- Choose Zones -
1. Press 8 (WATCH POINTS)(Keypad beeps)
  2. Enter Owners Passcode (Master)(Keypad beeps)
  3. Press Zones to chime (1 to 8)(Zone Light ON = Chime)
  4. Press CLEAR to exit

Battery Test - 1 + User Code

(System will test battery for 4 minutes, if trouble keypad will sound tone)