



4/19/12

5843-4: Replacement the 5804 (5804 is discontinued)

DISCUSSED @ MEETING

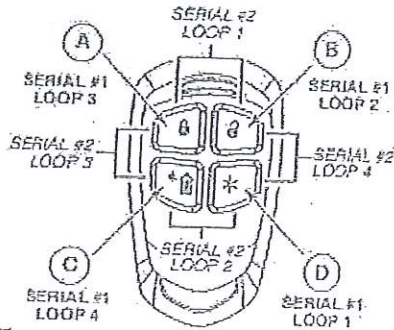

Kenco Standard Functions

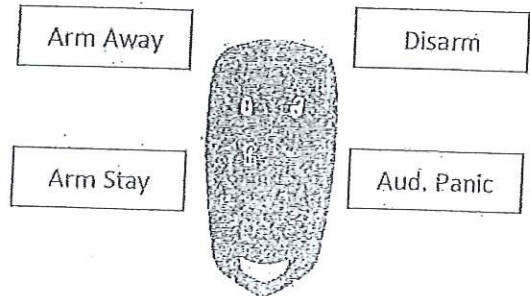

NOTE

1. SERIAL #1 FUNCTIONS ACTIVATE WHEN THE RESPECTIVE BUTTON IS HELD DOWN UNTIL THE LED FLASHES.
2. SERIAL #2 FUNCTIONS ACTIVATE WHEN THE TWO RESPECTIVE SERIAL #2 BUTTONS ARE PRESSED AT THE SAME TIME AND HELD DOWN UNTIL THE LED FLASHES.

5843-4

Using a Button: To activate a programmed function, press and hold the appropriate key(s) until the LED begins to flash (about 1/2 second).

Loop	Button	Function	Zone Type	Type Definition	Note
#1	D	Audible Panic	07	24-HR Audible Alarm	
#2	B	Disarm	22	Disarm (BR Only)	Must be assigned to a user
#3	A	Away	21	Arm-Away (BR Only)	Must be assigned to a user
#4	C	Stay	22	Arm-Stay (BR Only)	Must be assigned to a user

NOTES:

- The LED is confirmation of transmission only, DOES NOT indicate signal was received at panel.
- NO STICKERS are available – so no more “blue FOB”, “Green FOB” etc
- LED will not flash when battery is low.
- This device has a 2nd serial number (see install guide for info) that allows for 4 more loops to be used. These loops can be used as needed but **DO NOT** use them for a critical function (like panic) because they cannot be labeled and thus no way the customer will remember in a stressful situation.
- Remove screw to replace battery (Maxell CD2032, Duracell DL2032 or equivalent)
